


## How to adjust and tighten the quick snap locks on the tripod legs

Because the tripod is used with a pochade box which is way heavier than a camera, the quick snap locks on the legs tend to loose after using the tripod for a while. The leg will collapse if one of the snap lock doesn't hold the leg tightly.

You can easily adjust and tighten the hex screw on the snap lock to make it back to work. This is a maintenance routine to taking care of the tripod.

Take the smaller hex key tool from the zipper pocket inside the tripod bag to adjust the hex screw.

Make sure to open the flap before adjusting the screw. Opening the flap will release the tension on the hex screw, or the screw will be hard to turn.

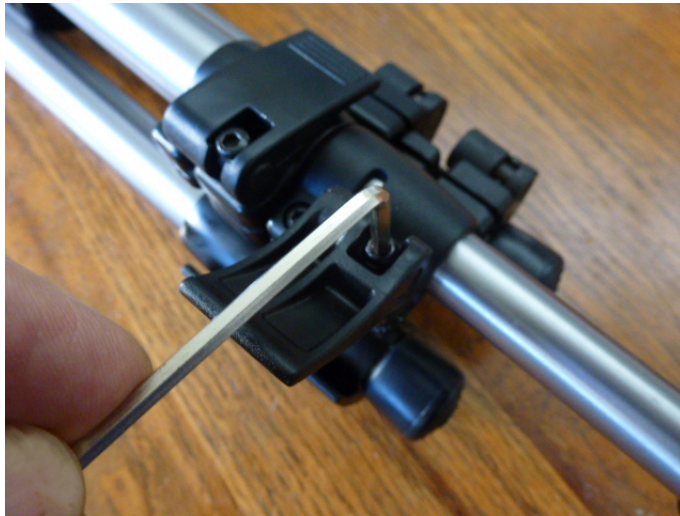

Carefully tighten the hex screw. Adjust it just enough for the snap lock to hold the leg from slipping. Adjusting the screw too tight will cause the flap hard to lock.

To avoid the hex key from stripping in the hex hole on the screw head, push the key harder toward the hole while turning.

Always keep the hex key inside the zipper pocket so you may adjust the snap locks whenever needed especially in the field.